alpha+ by ascott

a range of basic corrosion test cabinets from the company you can trust





Easy to install – minimal number of external service connections

Simple to operate – intuitive colour touch screen interface

Reliable – uncomplicated design backed by 30 years manufacturing experience

a range of basic corrosion test cabinets from the company you can trust

H Series
S Series
SP Series

H500 / H1000

Saturated Humidity Cabinets

S500 / S1000

Salt Spray Cabinets for short-term tests*

SP500 / SP1000

Salt Spray Cabinets for long-term tests*



- A range of 6 saturated humidity and salt spray cabinets.
- Two sizes, with either 500 or 1000 Litre internal capacities (16.6 / 35.3 cu ft).
- Robust glass reinforced plastic (GRP) construction, a durable impact resistant material with strong chemical and corrosion resistant properties to ensure a long life.
- Fully transparent and seamless domed roof providing 360° visibility, self-supporting when open.
- SP salt spray cabinets equipped with an advanced control system featuring a peristaltic pump based salt water delivery system, coupled with a user adjustable precision speed controller, to ensure consistent salt fog fall-out rates during long-term unattended testing.



Easy to install – minimal number of external service connections




Simple to operate – intuitive colour touch screen interface



Reliable – uncomplicated design backed by 25 years manufacturing experience

common design features

- Manufactured from a robust glass reinforced plastic (GRP) construction, combined with other non-corroding materials, to guarantee a trouble free long life.
- Visually striking, transparent domed roof providing unimpeded 360° viewing of the cabinet interior.
- Latching roof stay for ease of loading.
- Self-regenerating water trap seal, preventing salt fog escaping during operation.
- Ergonomically positioned menu driven colour touch screen controller for comfortable and intuitive control.
- Timed stop facility and hours run counter.
- Multi language capability.
- Onscreen graphing of chamber temperatures.

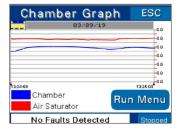









basic corrosion test cabinets

models: H500 & H1000 saturated humidity cabinets






key features

- Precise temperature controlled, high humidity environment. Water held in a sump located in the cabinet base, is heated by an immersion heater to generate water vapour.
- As water vapour evaporates, it saturates the cabinet atmosphere with moisture. Test samples in the cabinet, below the dew-point temperature of the saturated air, will develop surface condensation.
- By careful design the high humidity environment is achieved without the need for a circulation fan, which would otherwise have to endure the hostile, high humidity environment.
- Safety cut-outs ensure the immersion heater is automatically isolated if the water reservoir runs dry.
- User can program either a single set temperature, or automatically cycle the cabinet temperature between two different temperatures for user defined periods of time.
- Automatic filling and topping up of the humidity water reservoir if connected to a pressurised water supply.



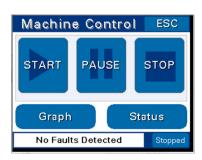

basic corrosion test cabinets

models:

S500 & S1000 salt spray cabinets

- the ideal choice for short term tests





key features

- Designed specifically for short-terms tests (up to 240 hours duration).
- Cabinet heated by externally mounted heater mats, protecting them against damage from the corrosive climate inside the cabinet, also ensuring uniform heat distribution inside the cabinet.
- Heated bubble tower humidifies the compressed air en-route to the salt fog atomiser, in full compliance with international test standards.
- Bubble tower can be topped up with water automatically, or by hand via the manual filler port.
- Utilises the atomisers' venturi effect combined with the air pressure regulator and gauge to deliver a uniform and continuous fall-out of salt fog on to the samples under test.
- Supplied with a 90L external salt water solution tank, easier to fill and clean than an integral tank.
- The all plastic atomiser has an integral filter in addition to a filter on the reservoir feed pipe to prevent salt crystal build-up blocking the outlet nozzle and disrupting the test.
- Cabinets can be operated with a wet or dry base.
- Insulated non-transparent roof blanket, offering greater thermal efficiency available as an option.







basic corrosion test cabinets

models:

SP500 & SP1000 salt spray cabinets

- the ideal choice for long term tests

key features

- Designed specifically for long-terms tests (over 240 hours duration).
- Cabinet heated by externally mounted heater mats, protecting them against damage from the corrosive climate inside the cabinet, also ensuring uniform heat distribution inside the cabinet.
- Heated bubble tower humidifies the compressed air en-route to the salt fog atomiser, in full compliance with international test standards.
- Bubble tower can be topped up with water automatically, or by hand via the manual filler port.
- Supplied with a 90L external salt water solution tank, easier to fill and clean than an integral tank.
- Additional and larger capacity tanks available for reduced changeover time on long-term testing.
- The all plastic atomiser has an integral filter in addition to a filter on the reservoir feed pipe to prevent salt crystal build-up blocking the outlet nozzle and disrupting the test.
- Cabinets can be operated with a wet or dry base.
- Insulated non-transparent roof blanket, offering greater thermal efficiency available as an option.

... plus the additional features:

- SP models are equipped with an advanced control system featuring a peristaltic pump based salt water delivery system, coupled with a user adjustable precision speed controller.
- Ensures consistent fall-out of salt spray / fog on to the test samples, over longer term duration tests (240+ hours of continuous salt spray testing) especially if such testing is unattended.









installation requirements

Developed with ease of installation in mind, the Alpha+ features integral runners to enable a fork lift truck to lift the cabinet from behind.

Once transported, the cabinets are floor standing with lockable castors so that they can be manoeuvred into the test facility and positioned with ease.

A connection to an exhaust vent to atmospheric pressure and a low level waste water drain is required, to allow the combined exhaust and drain to remove waste water / salt water and fog from the cabinet.

All Alpha+ cabinets can be installed with minimal disruption in as little as 30 minutes.

technical support

Ascott has a wealth of knowledge and highly experienced technical support staff, internally and externally amongst our many distributors. So wherever you are in the World we can help keep your Alpha+ test cabinet in excellent working condition.

international standards compliance

The Alpha+ range complies with the most popular international standards for corrosion testing, including:

Salt spray standards

ASTM B117

ISO 9227

DIN 50 021

JIS Z 2371

Humidity standards

DIN 50 017-KK

DIN 50 017-KFW

DIN 50 017-KTW

ISO 6270-2

VDA 621-421


ASTM D2247

BS 3900 Part F2

All cabinets are CE marked as your assurance of their quality and compliance with European directives.


technical specifications

Product Details		H500	H1000	S500 & SP500	S1000 & SP1000
Workspace capacity	Ltrs (cu ft)	500 (17.6)	1000 (35.3)	500 (17.6)	1000 (35.3)
Workspace internal dimensions	width 'a' mm (inches)	1076 (42.4)	1553 (61.1)	1076 (42.4)	1553 (61.1)
	depth 'b' mm (inches)	683 (26.9)	863 (33.0)	683 (26.9)	863 (33.0)
	cabinet height 'c' mm (inches)	616 (24.3)	620 (24.4)	616 (24.3)	620 (24.4)
	roof height'd' mm (inches)	250 (9.9)	350 (13.8)	250 (9.9)	350 (13.8)
	total height 'e' mm (inches)	866 (34.2)	970 (38.2)	866 (34.2)	970 (38.2)
Cabinet external dimensions	width 'f' mm (inches)	1650 (65.0)	2127 (83.7)	1650 (65.0)	2127 (83.7)
	depth 'g' mm (inches)	934 (36.8)	1127 (44.4)	934 (36.8)	1127 (44.4)
	height 'h' mm (inches)	1102 (43.4)	1159 (45.6)	1102 (43.4)	1159 (45.6)
Cabinet weight	kg (lbs)	130 (287)	190 (419)	130 (287)	190 (419)
Cabinet load capacity	kg (lbs)	80 (176)	150 (330)	80 (176)	150 (330)
Cabinet colour		White	White	White	White
Saline reservoir capacity	Ltrs (US gal)	n/a	n/a	90 (23)	90 (23)
Voltage#	Volts (50/60 Hz, 1 ph)	220-240	220-240	220-240	220-240
Max current##	Amps	10	10	10	10
Bubble tower temperature range	°C (°F)	n/a	n/a	Adjustable from an	nbient to +63 (+145)
Cabinet temperature - without insulated roof option	°C (°F)	Adjustable from ambient plus 10 (50) to +55 (+131)		Adjustable from ambient to +35 (+95)	
- with insulated roof option	°C (°F)	n/a	n/a	Adjustable from an	nbient to +50 (+122)
Salt fog fall-out rate - without insulated roof option - with insulated roof option	ml per hour per 80cm ² ml per hour per 80cm ²	n/a n/a	n/a n/a	Adjustable from 1.0 to 1.5 Adjustable from 1.0 to 2.5	
Sample holders included Slots * Max number of test coupons **	per cabinet per sample holder per cabinet	5 30 150	7 38 266	5 30/24 144	7 38/32 260

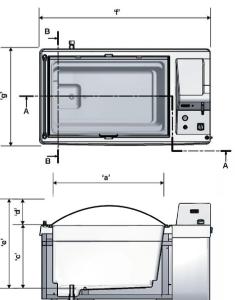

Sectional view on A-A

- # Other voltages available on request.
- ## For other voltages the current will vary.
- \star Sample holders are pre-cut with 3mm (1/8inch) wide slots, angled 15 degrees from vertical, to accommodate test coupons but will support other test samples as well. All but one of the holders can be removed. On the S & SP models one holder also supports the salt fog atomiser, and as a consequence has 6 fewer slots available for use.
- ** The maximum number of test coupons that can be accommodated assumes that all sample holders are fully loaded with test coupons of nominal dimensions; 100mm (4 inches) wide by 150mm (6 inches) high.

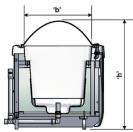


Sectional view on B-B

antional accessories of all cabinets

optional accessories of all cabinets						
		500 L 1000 L Option reference				
	Internal base loading platform	ACC15/8 ACC15/9	Horizontal removable loading platform, covering the internal base of cabinet, to enable large/heavy test samples to be accommodated directly on the internal base of the cabinet.			
	Extra sample holders	ACC16/7 ACC16/8	Corrosion test panel sample holders. Pre-cut with 3mm (1/8inch) slots, angled 15 degrees from vertical, to accommodate test coupons - but will support other test samples as well.			
	Rod type sample holders	ACC17/6 ACC17/7	For suspending small test samples hung beneath, or supporting larger test samples placed on top.			
	Spiked type sample holders	ACC18/4 ACC18/5	For suspending test samples from 10mm/0.4" dia x 55mm/2" long spikes, equally spaced on both sides.			
	Transformer	ACC33	Converts the Alpha + cabinet to operate on 110 VAC.			
	Height increase kit	ACC56	Kit of components for raising the height of a cabinet by 138mm ± 10 mm.			
	Installation kit - S & SP cabinets Installation kit - H cabinets	ACC22 ACC23	A U-trap to connect between the drain outlet of cabinet and local drain facility, to prevent any smells from entering the cabinet via the drain. Also 3m of drain/exhaust tubing with a selection of couplers, and (for			







Extra sample holders ACC16/7 ACC16/8



Rod type sample holders ACC17/6, ACC17/7



Spiked type sample holders ACC18/4, ACC18/5



Transformer ACC33



optional accessories for S & SP salt spray cabinet models

500 L 1000 L

Option reference

ACC59/*

ACC59/*

ACC04/1

ACC06/*

ACC11

PERC012

SALC010

Air drying system for SP cabinet ACC53/1 ACC53/2

Insulated roof blanket

Additional salt solution reservoirs

Deluxe salt solution reservoirs

Air compressor

Hand-held pH meter

Peristaltic pump tube

Deioniser

Fall-out measuring kit ACC35 Two 80cm² funnels and two 0-100ml measuring cylinders, for monitoring salt spray fall-out rate.

Hand-held salinity refractometer ACC100 A salinity refractometer to give a direct reading of percentage sodium chloride in water, in the range 0 to 28%, from a single drop of salt solution. Can be used to simply and accurately check the concentration of the salt solution to be sprayed.

ACC45/1 ACC45/2 An insulated non-transparent blanket for the transparent roof. Improves thermal efficiency to increase cabinet maximum operating temperature

and salt spray fall-out range. A salt solution reservoir with lid in addition to the one supplied as standard.

ACC22 only) 3m compressed air hose with hose clips.

* ACC59/14 73 Ltr / 19 US gal capacity model * ACC59/13 90 Ltr / 24 US gal capacity model

Translucent salt solution tank with a graduated scale for viewing the contents, supplied with a hinged lid for filling & cleaning, mounted on wheels.

* ACC59/1 80 Ltr / 21 US gal capacity model * ACC59/2 as ACC59/1 but with air agitation * ACC59/5 115 Ltr / 30 US gal capacity model * ACC59/6 as ACC59/5 but with air agitation * ACC59/9 160 Ltr / 42 US gal capacity model * ACC59/10 as ACC59/9 but with air agitation

Provides continuous supply of oil free compressed air to enable functioning without connection to a local compressed air supply.

Provides high purity water for making up salt solution and topping up the cabinet air saturator and humidity system.

ACC06/1 small model * ACC06/2 medium model large model

Digital pH meter, for measuring the pH of salt solution fallout over range 0-14 pH with a resolution of 0.01 pH.

1m length of replacement peristaltic pump tube. Pack of 5 replacement atomiser filters.

Alpha range air drying system for Prohesion®Test.



Fall-out measuring kit ACC35



Insulated roof blanket ACC45/1, ACC45/2



Additional salt solution reservoir ACC59/13



Deluxe salt solution reservoir ACC59



Air compressor



ACC06




Hand-held pH meter ACC11



Salt solution tank fitted with air agitation ACC59/6

optional accessory for H humidity cabinet models

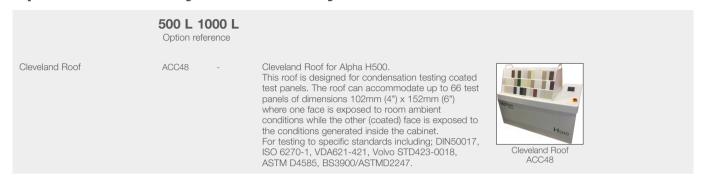



A range of basic corrosion test cabinets from the company you can trust

Other Ascott corrosion cabinets

The company also manufactures a range of Cyclic Corrosion Test (CCT) cabinets. Ascott CCT cabinets can be programmed to link together a variety of environments, in a sequence, which can be automatically cycled within the cabinet. This technique can be used to simulate naturally occurring corrosive conditions, which often combine synergistically to bring about a corrosion failure. Combining environments within a CCT cabinet produce more realistic corrosive conditions, than exposure to a single environment alone. This is a useful method for predicting service life expectancy, under laboratory conditions. For further information on cyclic corrosion cabinets contact Ascott.

All Ascott cabinets are CE marked.

It is the policy of Ascott Analytical Equipment Ltd to protect its products by means of patents and registered designs. The information contained herein was correct at time of going to press and is subject to change without notice.

© 2019 Ascott Analytical Equipment Ltd

Issue C

Local representative/supplied

North American Office

Ascott Analytical Equipment
34029 Schoolcraft Road
Livonia, MI 48150, USA
phone: +1 734 542 1300
fax: +1 734 542 1353
email: info@ascott-analytical.com
web: www.alpha--plus.com

European Office

Ascott Analytical Equipment Limited 6 - 8 Gerard, Lichfield Road Industrial Estate Tamworth, Staffordshire, B79 7UW, Great Britain

phone: +44 (0) 1827 318040 fax: +44 (0) 1827 318049 email: info@ascott-analytical.com web: www.alpha--plus.com

